


TV



Power
Cable

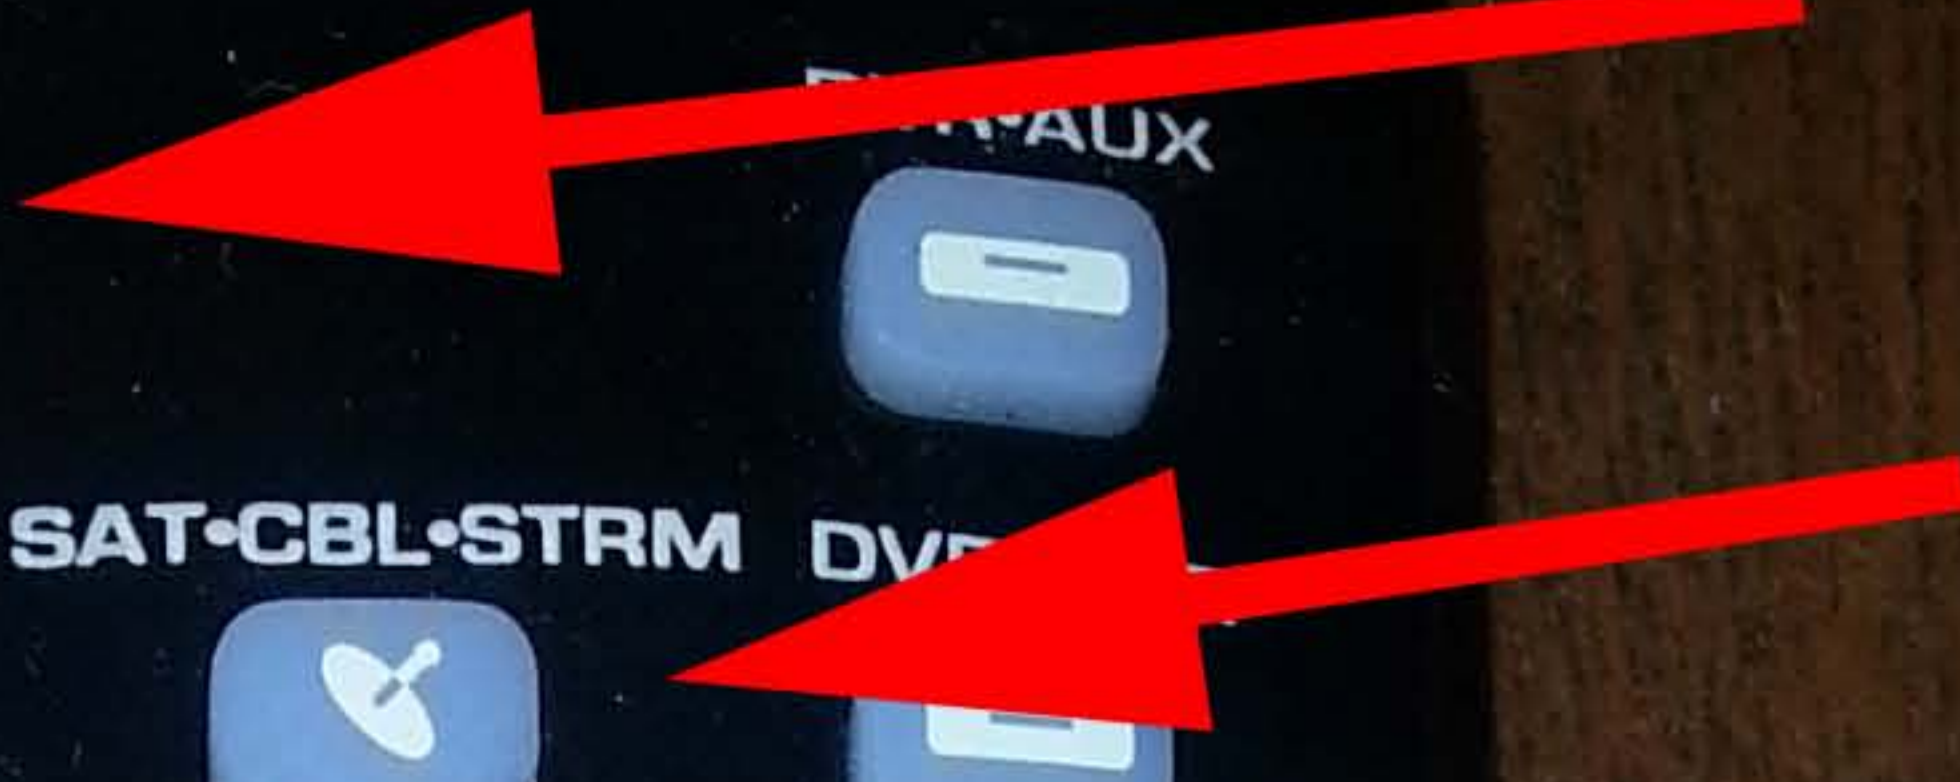

Channel




RCA

Volume

Channel

Power

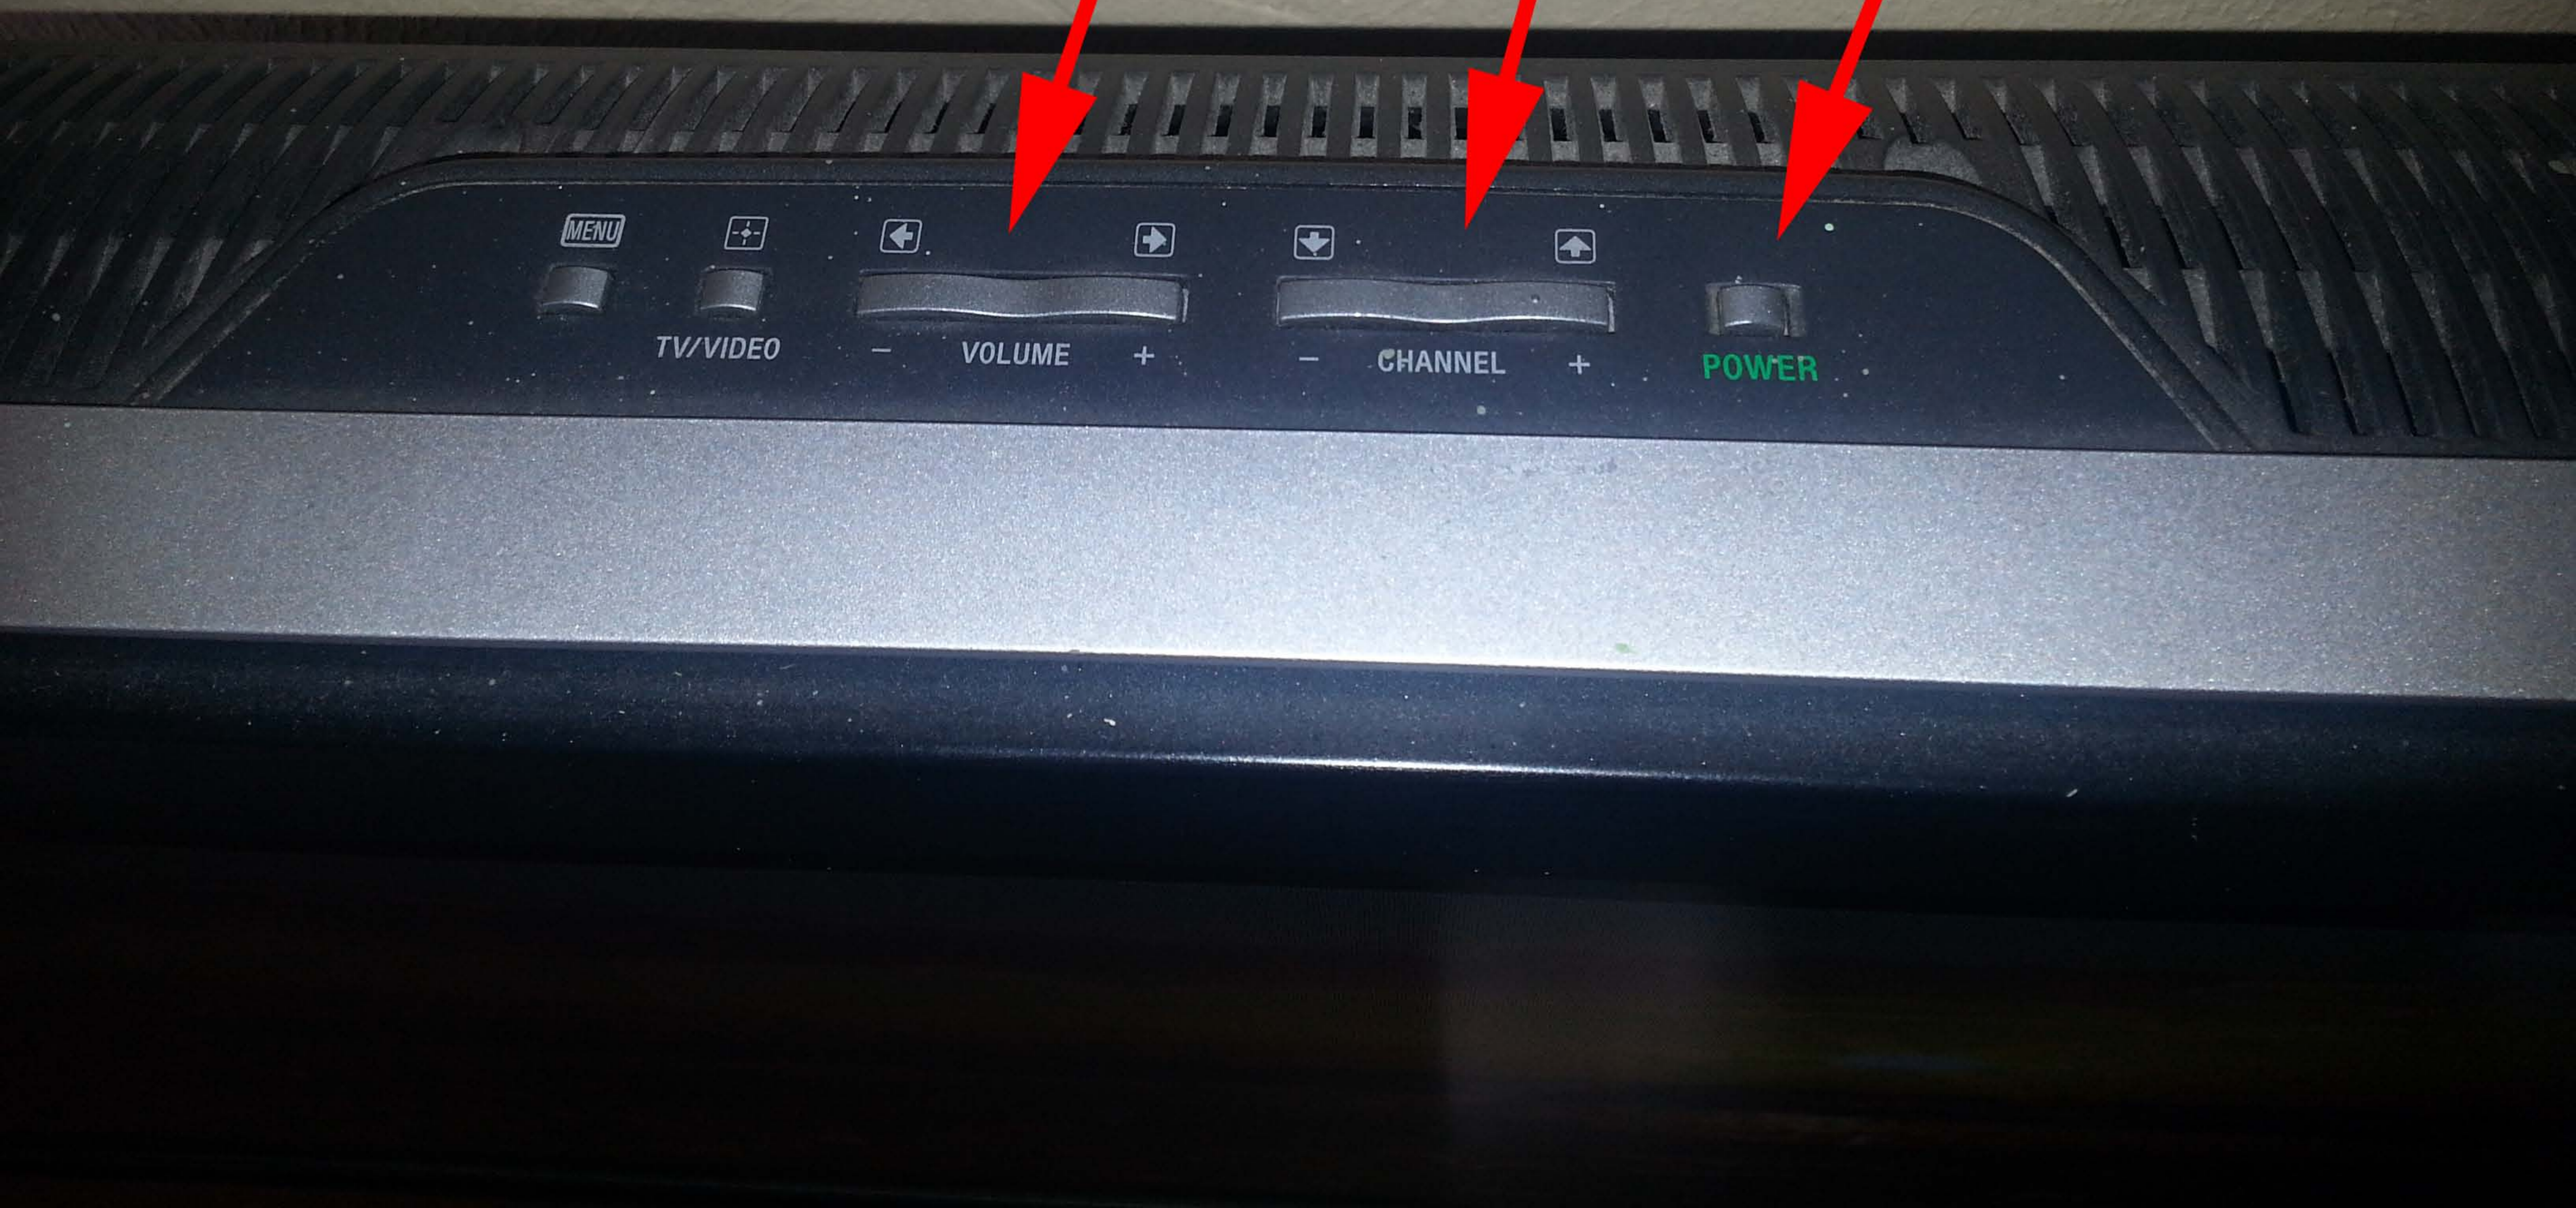

Cable Channel Display on TV Display




1001
115C111

Scenic Hawaii HD
12:00 - 3:00 pm

SONY

100111 115C111 HDMI

Cable Box is plugged in when lit

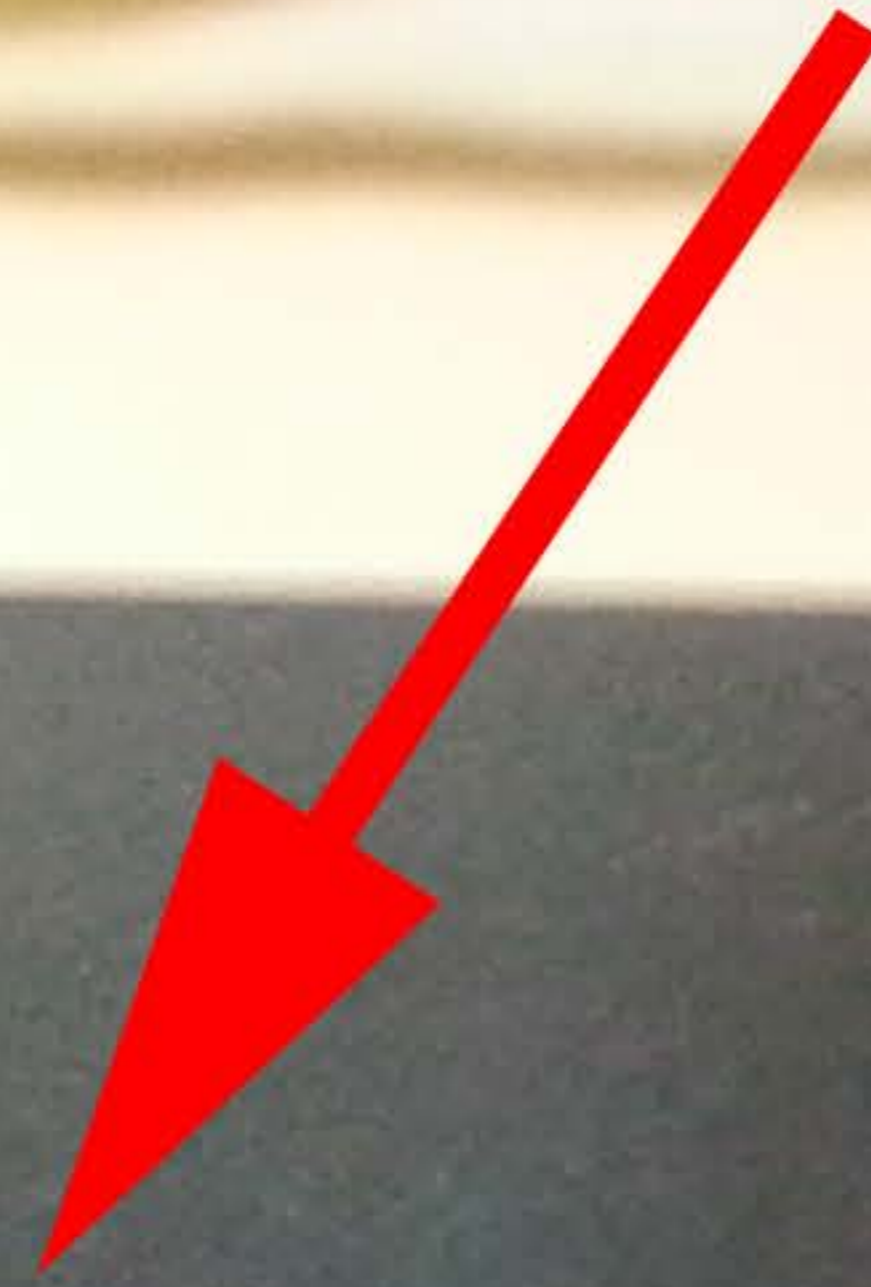

480i

1:46



POWER

GUIDE INFO EXIT SETTINGS



Button to turn cable on or off



REC/AUTO 1080i

1:46



GUIDE INFO EXIT SETTINGS



Cable is powered on

TV Channel Display

